

# *Technical* Bulletin

**Bulletin No:** TB1017 **Effective Date:** December 2018      **Issued by:** Adam Wirkiowski  
Aftermarket & Product Support Mgr

**Subject:** Disabling the De-clutch function on Pegasus Series Trucks


To disable the de-clutch function on the Pegasus truck you must disconnect the connector that goes to pin A55 on the transmission controller. The cable group is located under the seat which can be accessed through the service panel pictured here:



Locate the 24D wire and disconnect it from the transmission controller. Do not remove the wire completely as it is still needed for the brake lights. See below:



When completed the connection should look like this:

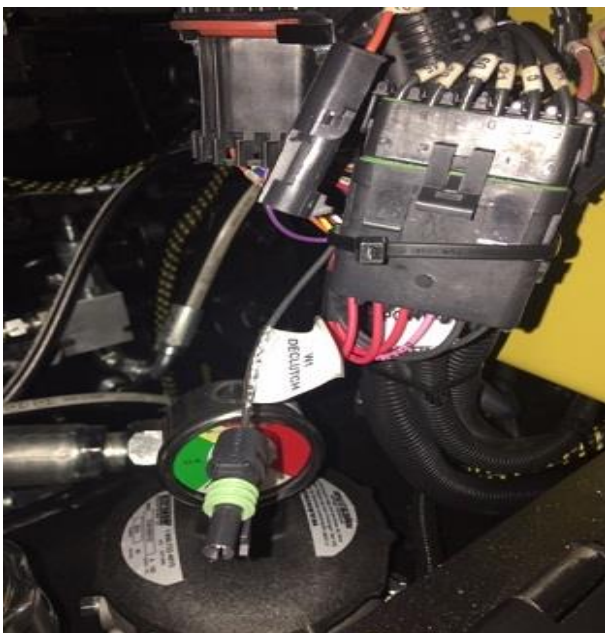

Remember to secure the two wires.