

# ZONE DEFENSE

SYSTEM 323-1-4

Navigation Input



Please read this manual thoroughly before  
operating the unit,

**ZONE DEFENSE**  
Saint Petersburg, Florida  
**(866) 672-1212**  
(7" LCD 4 Camera 22-pin Monitor Cable)  
V1.0

## TABLE OF CONTENTS

Safety Information .....	1
System Features .....	3
System Components .....	4
System Operations .....	6
Connections .....	7
Menu Operations .....	8
Trouble Shooting .....	12
Optional Equipment .....	13

ZONE DEFENSE™ offers systems to meet any need and price point within the RV/Trucking Industries. Our systems offer unparalleled features designed for professional drivers. Zone Defense develops, manufactures and markets, among other devices: products and applications developed to transmit voice, video, audio and data either individually or in any combination with one another. The Company has also developed, manufactured and marketed different kinds of underwater video cameras, lights and accessories for the marine, commercial, transportation, trucking and consumer retail markets.

### **OPTIONAL TRUCK - TRAILER CABLE**

#### **Zone Defense Trailer Coil Cable**

Auxiliary Coiled 2-Camera Cable with 2 Receptacles for Zone Defense Camera Cables. Part# 359A2



## SAFETY INFORMATION

Before installing and operating read manual

### **Important! – Please Read This Manual Before Installing!**

Congratulations on the purchase of your Zone Defense™ System. Zone Defense is a leader in vehicle observation systems. When properly installed and used, your System 323-1-4 is designed to provide you with years of trouble-free operation. This manual contains important information required to properly install and operate the unit. Please read this manual thoroughly before beginning.

All Zone Defense products are strictly intended to be installed as a supplement and Zone Defense observation systems and/or products are not intended for use as substitutes for rear-view mirror devices, or for any other standard motor vehicle equipment required to be installed on vehicles by law. Zone Defense products contribute to improving the vehicle operator's field of view. Our products are no substitute for proper defensive driving techniques, observance of traffic laws and motor vehicle safety regulations.

### **Warnings!**

#### **Installation Location**

It is unlawful in most jurisdictions for any person(s) to drive a motor vehicle equipped with a television viewer/screen located at any point forward of the back of the driver's seat (or in any location that is visible, directly or indirectly), to the driver while operating the vehicle. The system 323-1-4 is designed to be used primarily as a rear observation device. In any installations where Systems 323-1-4 products are used to display television broadcasts or recorded video playback, installation *location* must adhere to local laws and regulations.

#### **Tampering**

To prevent electrical shock, **DO NOT OPEN THE MONITOR CASE.** There are potentially harmful voltages inside the monitor. There are no user serviceable parts inside any of the components of the Zone Defense products. If tampering is detected, the warranty will be considered void.

e24 **FC**

## **WARNING**

- ◆ Do not place heavy object on cables or cover them with rugs or carpets.
- ◆ Do not place cables where they can be pinched or stepped on.
- ◆ Designed as a driving aid. Watching videos, broadcasts, DVDs and/or any images other than intended driving assistance cameras is prohibited.

## **CAUTION**

- ◆ To avoid damage to electronic circuit, stop using this product while doing welding work to the vehicle and/or trailers.
- ◆ Never immerse any component in water, and do not employ spray cleaners. When cleaning, use damp lint-free cloth only.
- ◆ Connect this unit only to other compatible devices.
- ◆ Make sure all cables are connected properly; improper cable connections may damage the camera and the monitor.
- ◆ Make sure all cables are connected firmly.
- ◆ Cables should not be allowed to touch hot or rotating parts, such as engine, ventilator, etc.
- ◆ Do not locate the monitor near heat generating vents or devices.
- ◆ Turn off power to the monitor when connecting the camera.

Monitors are not designed to be waterproof. Exposure to water, such as rain, may damage the unit.

## SYSTEM FEATURES

### MONITOR

Display Device: 7" Color TFT-LCD with digital screen  
Audio Output: Max. 1W  
Loudspeaker: one 15 x 24mm round loudspeaker  
Power Supply: 10v-32v  
Outer dimensions: 182mm(W) x 122mm(H) x 26mm(T) without flush mount;  
198mm(W) x 138mm(H) x 31mm(T) with flush mount  
Dot Pitch: 0.192(W) x 0.1805(H)  
Resolution: 800 x 3(RGB) x 480  
Contrast: 500: 1  
Brightness: 400cd/m<sup>2</sup>  
Viewing Angle: U: 50 / D: 60, R/L: 70  
Operating Temperature -20~+ 70° C, RH90%  
Storage temperature -30~+ 80° C, RH90%

### 1 / 3" COLOR CCD SENSOR SPECIFICATIONS (REAR)

*With Audio and IR*  
TV System: NTSC  
Effective Pixels: 512 x 492 pixels  
Sensing Area: 4.9mm x 3.7mm  
Scanning System: 2:1Interlace  
Sync. System: Internal  
Resolution: 420TV lines  
Horizontal Sync. Frequency: 15.734KHz  
Vertical Sync. Frequency: 60Hz  
Minimum Illumination: 0 Lux  
BLC: Auto  
Microphone: Yes  
Video Output: 1.0vp-p, 75Ohm  
AGC: Auto  
White Balance: Auto  
S/N Ratio: Better than 48dB  
Electronic Shutter: 1/60 ~ 1/10,000  
Current Consumption: Max. 300mA  
Power Supply: DC12V  
Operating Temperature: -20° C ~ 70° C, RH95% MAX  
Storage Temperature: -40° C ~ 80° C, RH95% MAX  
Lens: f = 2.8mm/F=2.0  
Lens Angle: 100° Vertically 130° Horizontally (May vary depending on system configuration)

### 1 / 3" COLOR CCD SENSOR SPECIFICATIONS (SIDE OPTIONAL)

Without Audio Image Device: SHARP  
Effective Pixels: 512 x 582 pixels / 512 x 492 pixels  
Sensing Area: 4.9mm x 3.7mm  
Scanning System: 2:1Interlace  
Sync. System: Internal  
Resolution: 420TV lines  
Horizontal Sync. Frequency: 15.625KHz / 15.734KHz  
Vertical Sync. Frequency: 50Hz / 60Hz  
Minimum Illumination: 0 Lux/F1.2 with IR  
Video Output: 1.0vp-p, 75Ohm  
Gamma Consumption: 0.45  
AGC: Auto



BLC: Auto  
White Balance: Auto  
S/N Ratio: Better than 48dB  
Electronic Shutter: 1/60(NTSC) / 1/50(PAL) ~ 1/10,000 Seconds  
Power Supply: DC12V  
Current Consumption: Max. 300mA  
Operating Temperature: -20° C ~ 70° C, RH95% MAX  
Storage Temperature: -40° C ~ 80° C, RH95% MAX  
Lens: f= 2. 8mm / F = 2.0  
Lens Angle: 120° (Standard)

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE

SYSTEM COMPONENTS



7-Inch Flat Panel



I/F Remote



Infrared Color w/ audio  
Rear Camera



Cable



22-pin AV Monitor  
Cable




Universal Mount



Sun Shield



Angle Adjustment screws  
U-support bracket(optional)

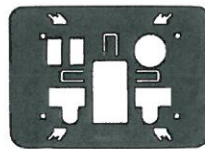

Flush Mount



Detaching Piece


## MONITOR

This monitor can be mounted in dash, hanging or seating in any position, whichever is suitable to the driver to observe the images. Take care not to block any necessary viewing area when mounting.

### Mounting Monitor


1. After determining the monitor's location, position the monitor support bracket, mark the bolt hole's location and then drill the holes. Be careful not to drill into any other surface that may be hidden.
2. If supplied, use washers on mounting screws. Attach monitor bracket. Check installation before mounting monitor.
3. Mount the monitor to the support bracket with supplied 4 angle adjustment screws.
4. Connect one end of the power cable (wire) to the proper connections. Connect the other end of the power cable (plug) to the monitor; connect the monitor and the camera with the system connecting cable.

### Camera Mounting

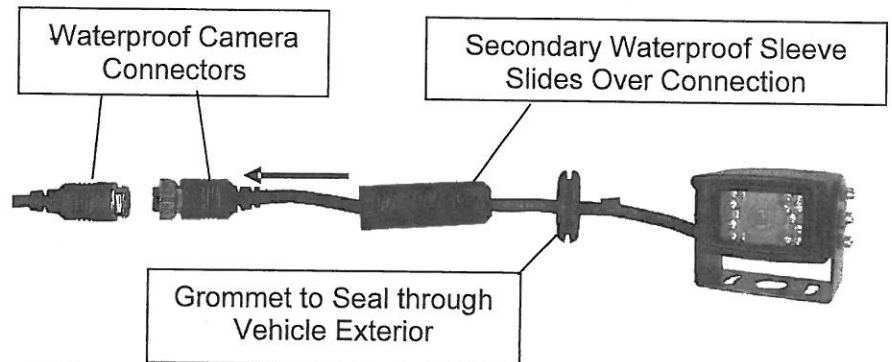


5/8-inch hole needed to pass connector through the exterior wall. Be careful not to drill a hole so large that the grommet will not seal. Before drilling make sure there are no obstacles in the way in the drill bit. Check to make sure wall thickness is suitable for weatherproof grommet. Use proper hardware to mount camera.

## MONITOR / REMOTE OPERATIONS

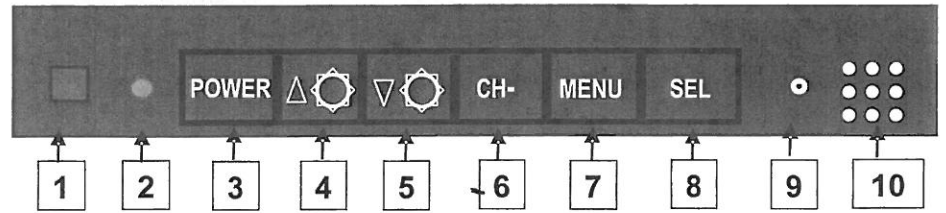


1. Remote Signal Receiver Window
2. Power Indicator Light
3. Power Off/On button
4. Brightness Increase Options Control Button
5. Brightness Decrease
6. Channel - (Down button)
7. Menu Control Button
8. SEL Switches between AV 1, AV2, AV3, AV4
9. Video Output
10. Loudspeaker

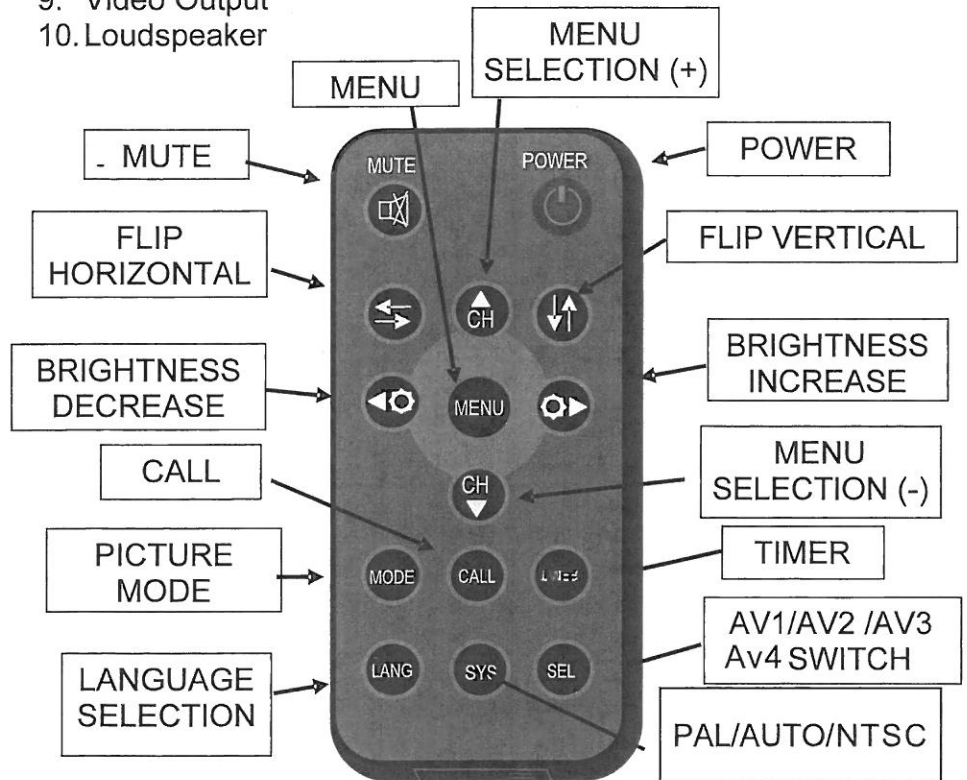



## CONNECTION OPERATIONS

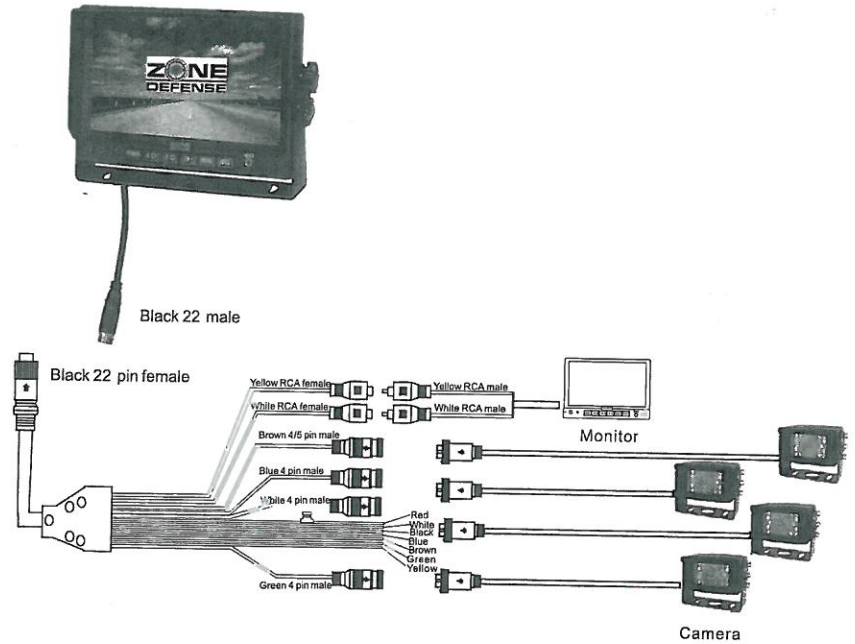

1. Black 4/5 pin male for Camera 1 / Camera 2 / Camera 3 / Camera 4.
2. Single red wire to positive power supply of DC/10-32V.
3. Single black wire to GND.
4. Single brown wire to positive power wire of back-up light.
5. Single white wire to positive power wire of left light .
6. Single blue wire to positive power wire of right light .
7. Single green wire to any other trigger control.
8. Yellow RCA female for video output .
9. White RCA female for audio output.

## MENU OPERATIONS

### MENU:

Press MENU in turn to display options as follows:

1. PICTURE
2. OPTION
3. SYSTEM

#### 1. Picture

(Note Color adjustment valid on Navigation input channel only)  
The BRIGHT, CONTRAST, COLOR, VOLUME options will display on the screen as illustrated below.

- Press CH- to select BRIGHT

PICTURE	
BRIGHT	50
CONTRAST	50
COLOR	50
VOLUME	50
.....	50

Press  $\Delta$  /  $\nabla$  to adjust the Brightness level

- Press CH- to select CONTRAST

PICTURE	
BRIGHT	50
<b>CONTRAST</b>	<b>50</b>
COLOR	50
VOLUME	50
.....	50

Press  $\Delta$  /  $\nabla$  to adjust the contrast.

## 2. Option

LANG, SCALE, CAM1, CAM2, CAM3, CAM4 options will display on the screens as illustrated below:

OPTION	
<b>LANG</b>	<b>ENGLISH</b>
SCALE	NORMAL
CAM1	NORMAL
CAM2	NORMAL
CAM3	NORMAL
CAM4	NORMAL

Press  $\Delta$  /  $\nabla$  to select ENGLISH / FRENCH / ITALIAN  
PORTUGUESE / SPANISH / RUSSIAN / DUTCH / GERMAN

- Press CH- to select SCALE.

OPTION	
LANG	ENGLISH.
SCALE	NORMAL
CAM1	NORMAL
CAM2	NORMAL
CAM3	NORMAL
CAM4	NORMAL

Press  $\Delta$  /  $\nabla$  to select ON/OFF. Scale refers to the reversing distance indicator displayed on the monitor.

- Press CH- to select CAM1.

OPTION	
LANG	ENGLISH.
SCALE	NORMAL
CAM1	NORMAL
CAM2	NORMAL
CAM3	NORMAL
CAM4	NORMAL

Press  $\Delta$  /  $\nabla$  to select NORMAL / MIRROR

### 3. SYSTEM

#### FACTORY PRE SET FOR APPLICATION DO NOT ADJUST

The COLOR-SYS, BLUE BACK, HORIZONTAL, VERTICAL, ZOOM functions will display on the screen as illustrated below:



- COLOR-SYS  
( pre factory adjusted for your application, do not adjust)

SYSTEM	
COLOR SYS	PRE SET
BLUE BACK	ON
HORIZONTAL	↔
VERICAL	↕
ZOOM	0

Press  $\Delta$  /  $\nabla$  to select PAL / AUTO / NTSC.

- Press CH- to select BLUE BACK.

SYSTEM	
COLOR SYS	PRE SET
BLUE BACK	ON
HORIZONTAL	↔
VERICAL	↕
ZOOM	0

Press  $\Delta$  /  $\nabla$  to select ON / OFF.

- Press CH- to select ZOOM.

SYSTEM	
COLOR SYS	PRE SET
BLUE BACK	ON
HORIZONTAL	↔
VERICAL	↕
ZOOM	0

Press  $\Delta$  /  $\nabla$  to select 0 / 1.

0 stands for 16:9

1 stands for 4:3

## TECHNICAL SUPPORT

### Trouble Shooting Chart

Symptom	Cause	Solution
Small - Unstable image	Monitor improper voltage	Check the voltage of power supply
Black image	Monitor improper voltage	Check fuse, check power cable, wires or connections (look for loose or broken wires)
White image	Monitor/Camera	Check main system cable. Make sure all connectors are connected properly. If ok, check 4 pin camera /monitor cable
Blurred image	Dirty camera lens	Clean camera lens
Engine noise or Static lines	Monitor	Check ground and +12V DC source.
No light displayed on monitor	Broken fuse or low brightness level	Check if the brightness has been turned to the lowest level
No image	No power or unplugged connector	Check power and check for unplugged or broken camera cable

#### Technical Support

For help with Zone Defense technical support, please email us.

Email: [techsupport@ZoneDefenseTruck.Com](mailto:techsupport@ZoneDefenseTruck.Com)

[techsupport@ZoneDefenseRV.Com](mailto:techsupport@ZoneDefenseRV.Com)





Phone support: 866-672-1212



RV Parts/Sales Inquiries [Sales@ZoneDefenseRV.Com](mailto:Sales@ZoneDefenseRV.Com)

Trucking Parts/Sales Inquires [Sales@ZoneDefenseTruck.Com](mailto:Sales@ZoneDefenseTruck.Com)

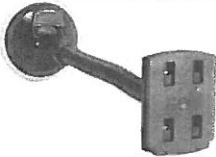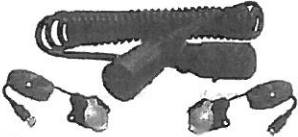**Optional Equipments**

	<p>Windshield Pedestal Monitor Mount - Part # 400A E-Z Windshield Mount allows the monitor to be removed when not in use.</p>
	<p>Zone Defense Truck/5<sup>th</sup> Wheel Coil Cable - Part# 359A Auxiliary Coiled Camera Cable With 2 Receptacles</p>
	<p>Zone Defense Camera Cables 20 Meter Cable Part #358 15 Meter Cable Part #358A 10 Meter Cable Part #358B</p>
	<p>Color Camera Part # 312-313C Optional I/R Non-Color camera w/ cables and 5m camera Cable</p>
	<p>Dome Camera Part # 312-313D Color infrared camera w/ adjustable angle view and 5m camera Cable</p>

BV 5/08

# **ZONE** **DEFENSE**

Saint Petersburg, Florida  
**(866) 672-1212**

**RV SITE: ZONEDEFENSERV.COM**  
**TRUCKING SITE: ZONEDEFENSETRUCK.COM**

## **SALES & PARTS**

**RV Parts/sales inquiries**

[sales@zonedefenserv.com](mailto:sales@zonedefenserv.com)

**Trucking Parts/sales inquiries**

[sales@zonedefensetruck.com](mailto:sales@zonedefensetruck.com)